

3300 Conventional Fire Alarm Control Panel

- Fully Compliant with EN54 Parts 2 & 4
- Choice of 4 or 8 Zones
- Manual or Automatic Device Indication
- Zone Delays
- Coincidence Detection
- Fire Link Delay
- Non-latching Zones
- Zone Disablements
- Alarm Disablements
- Fire Link Disablement
- User Walk Test



Fire Detection - Non Addressable

Fire Detection - Non Addressable

3300 Technical Specification

Power Supply Mains	230V AC. Nominal (\pm 10%).	Maximum Quiescent Zone Load	1.5mA per zone.
Integral Charger	1A switch mode, temperature compensated.	Maximum Number of Detectors	20 per zone (smoke or heat).
Auxiliary 24V output	24V DC, 100mA max.	Maximum Number of Devices	32 (MCP and Dets) per zone.
Maximum Battery Size	2 x 12V 3.3Ah.	MCP Series Resistor Value	180 Ω \pm 5%.
Mains Fuse	1A HRC ceramic 20mm.	Number of Alarm Circuits	4.
Battery Fuse	1.6A F 20mm.	Alarm Circuit End Of Line Value	10k Ω 1/4W \pm 5%.
Working Voltage	20V to 30V DC.	Maximum Alarm Load	150mA per circuit.
Current Consumption	15mA (24V DC) + Zone Load.	Class Change Input	Activates alarm outputs.
Number of Detector Zones	4 or 8 depending on the model purchased.	Remote Alarm Input	Activates alarm outputs, internal buzzer and general fire indicator.
Maximum Zone Cable Length	500 metres.	Global Fault Contacts	24V DC 1 A rating.
Maximum Zone Cable Capacitance	0.27 μ F.	Global Fire Contacts	24V DC 1 A rating.
Maximum Zone Cable Resistance	15 Ω per conductor.	Expansion Port Communications	2 wire Data + 2 wire Power.
Detector Circuit EOL Values	Resistive (8.2k Ω) or capacitive (100 μ F/22 Ω).	Temperature Range	0 to 40 Degrees Centigrade.
		Humidity Limit	85% Non-Condensing.

The 3300 series of conventional control panels has been designed to provide a simple, user-friendly solution, with inbuilt flexibility previously only found in more complex addressable systems. With a choice of 4 or 8 detection zones the 3300 panel is ideal for small to medium sized buildings such as Industrial Units, Retail Units, Shops, Schools, ...


All 3300 panels can be either surface or recessed mounted, with the controls and indications protected from unauthorised access by entering a user access code. The functions include clearly labelled silence, reset, buzzer mute and sound alarms push buttons along with additional facilities such as zone test, zone disablement, alarm disablement, delay disablement and fire link disablement.

A particular feature of the 3300 Panel, is the ability to identify if a 'FIRE' signal has been generated manually by a person activating a manual call point (MCP) or automatically from a detector. This knowledge enables an appropriate cause and effect sequence to be implemented such as time delays to allow for alarm verification for automatic detectors, but immediate alarms from MCP's. Cause and effect functions include coincidence detection, zone delays and/or fire link delay.

Interconnection with other systems is simplified as zones can be configured as 'non-latching', and there are dedicated 'remote alarm input' and 'class change input' terminals. Up to 8 repeater panels can be connected to the 3300 panel on a serial communication link.

The 3300 fire alarm control panel complies with EN54 parts 2 and 4.

3304, 3308 Fire Alarm Panel, 3300 Fire Alarm Repeat Panel

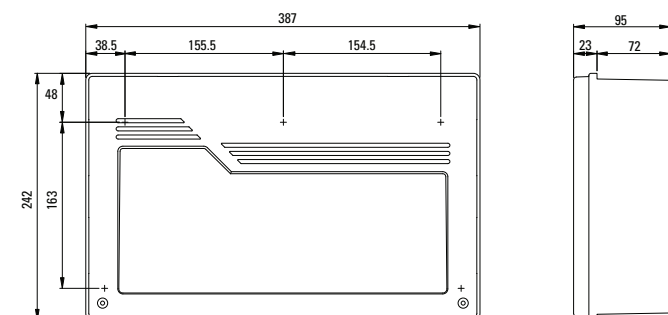


Dimensions in mm

Model References

3304 4 Zone Fire Alarm Control Panel
3308 8 Zone Fire Alarm Control Panel
3300/RP Fire Alarm Repeat Panel

3300 Features

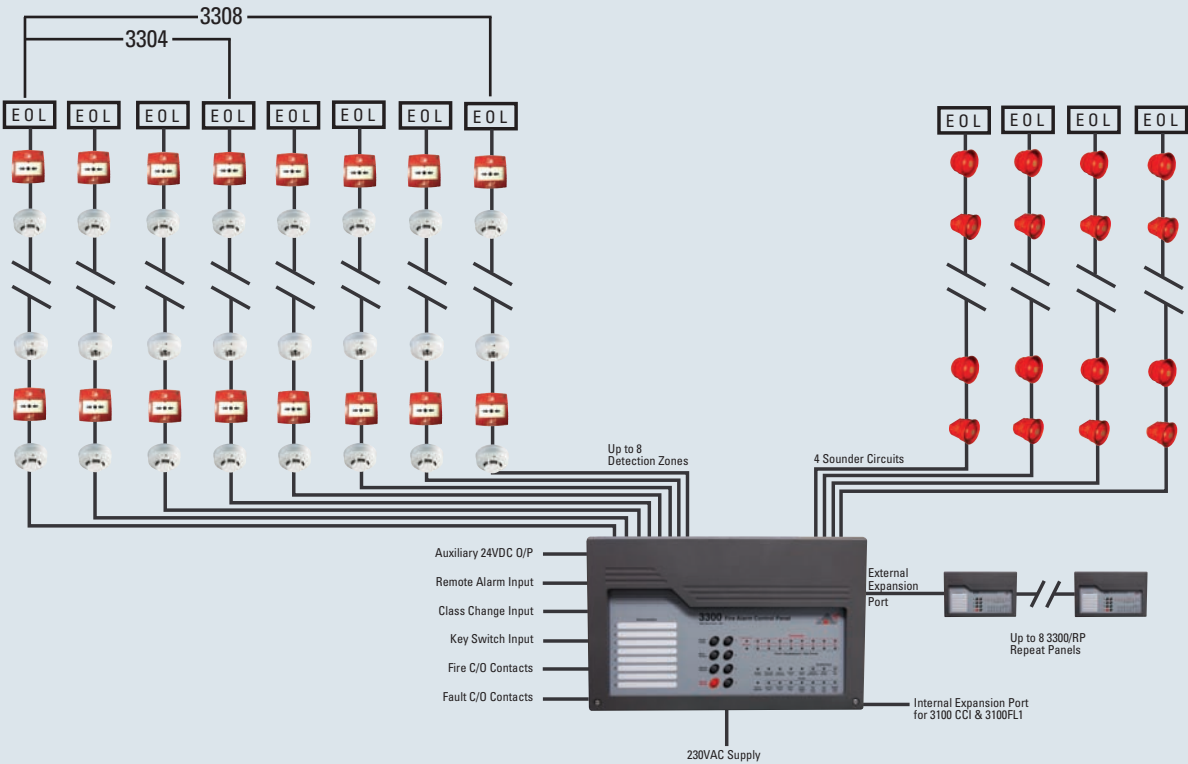

Detection Zones

- Ability to distinguish between manual or automatic device activation using Protec 3100/MCP manual call points and 3000 series conventional detectors. Up to 20 detectors per zone.
- Delay to Zone Activation
0 to 10 minutes programmable.
- Coincidence on Zones
2 or more zones programmable (2 or more zones must activate together to trigger panel). A default time-out is given if only one coincidence zone activates.
- Non-latching Zones
1 or more zones may be programmed non-latching. Panel resets when cause of the fire is cleared. Global fire and optional fire link outputs do not activate.
- Zone Disablements
1 or more zones can be disabled to prevent faults and activations.
- Zonal Test
1 or more zones. When triggered operates alarm outputs for 4 seconds, then resets panel. Only one zone at a time can be tested by the user.

Outputs

- 4 Alarm Circuits, each rated at 150mA. Circuits 1&2 and/or 3&4 can be linked together to each provide a 300mA rated circuit. Total alarm load 600mA.
- Alarm Disablement
Alarm circuits 1 / 2 and 3 / 4 can be disabled to prevent them from activating or displaying faults.
- A Global Fire Contact and Global Fault Contact are provided, each rated at 24V DC 1A.
- External Expansion Port
Up to 8 Repeat Panels can be connected on the external expansion port to provide full panel display and user operating functions.
- Internal Expansion Port. Used for the connection of optional additional devices such as the monitored Fire Link Interface and Clean Contact Interface.
- Fire Link Disablement
The optional fire link interface can be disabled to prevent faults and activations.
- Fire Link Delay
The optional fire link interface can be set to have an activation delay.

Functionality

The following functions can be performed by the user when entering the user access code.

- Silencing an alarm condition
- Sounding the alarms
- Resetting the panel after an alarm activation
- Testing the front panel indications and buzzer
- Programming a zone into test mode (only one zone at once in user mode)
- Disablement of detector circuits
- Disablement of alarm circuits
- Disablement of any programmed delays
- Disablement of the optional fire link interface

KEY

- 3000/OPHT
- 3000/OP
- 3000/10N
- 3000/TEMP64
- 3000/MCP
- 3000/SSR2
- B6D024

3300 Optional Equipment



3300/RP Repeat panel

The 3300/RP Repeat Panel mimics all the indications and user functionality of the main panel as detailed previously. A maximum of 8 repeat panels can be connected to the 3300 panel using the external expansion port communications using 4 core screened cable +24V DC, 0V, Data+ and Data-.



3100CCI Zonal Clean Contact Interface

The 3100CCI provides a clean contact output per zone and can be configured (using on board DIL switches) to operate the relevant contacts on automatic zone activations, manual zone activations, any zone activations or any zone faults. To allow differentiation between manual or automatic zone activations, Protec 3000/MCP manual call points must be fitted.



3100FLI Fire Link Interface

The 3100FLI provides an open and short circuit monitored fire link, when used in conjunction with a 3100 Fire Link EOL PCB (WEFA348). The EOL device has a single pole clean changeover contact, rated at 1A 24V DC. Fire Link delay time can be enabled on the main panel and set-up locally on the 3100/FL, between 0 and 10 minutes.

Technical Specification:

	3300/RP	3100CCI	3100FLI
Supply Voltage	20V to 30V DC	20V to 30V DC	20V to 30V DC
Quiescent Current	11mA	8.5mA	6mA
Maximum Current	25mA	75mA	30mA
Maximum Clean Contact Rating	N/A	1A @ 24V DC	1A @ 24V DC
Maximum No Per Panel	8	1	1
Serial Communications	2 wire (plus power) 3100V1 Protocol		